

ALL phases of this installation must comply with
NATIONAL, STATE AND LOCAL CODES

Model:
CNT07015

5-Relay Communicating Electric Heat Control for Air Handler Installations

IMPORTANT — This Document is customer property and is to remain with this unit. Please return to service information pack upon completion of work.

1. Remove the existing control.
 - a. Remove the factory wiring connections. Label wires as necessary.
 - b. Remove the 1/4" ground screw.
 - c. Push the top of the two plastic tabs outward to release the control board.
2. Install the new control in reverse order. Set jumper per the table below.

JUMPER POSITION SETTINGS

- Electronic Heat Control

Model	Jumper Position
BAYEVBC20BK1AA	20kW
BAYEVCC25BK1AA	25kW

